

# TECHNICAL NOTE

Date: 13<sup>th</sup> September 2024

Ref: TN612 Raised by: ARD Distributed to : As Required

> Digico (UK) Ltd. Unit 5 The Distillery, Silverglade Business Park Chessington Surrey KT9 2QL England Tel: +44 1372 845600 email: <u>support@digiconsoles.com</u> <u>www.digico.biz</u>

# Quantum 852 MIXER

## **Engine Replacement**

**Important Note:** These instructions are a guide to replacing the engine in the Quantum 852 mixer. This note is for the use of factory approved technicians only.

Read the instructions carefully before starting and leave yourself time to perform the work. You will need to have the following tools to hand:

- Flat screwdriver
- Replacement MOD-Q8-ENG.

#### Ensure you have taken appropriate anti-static precautions.

Avoid working in areas with synthetic floor coverings or carpet, especially polypropylene material, as opposed to natural materials such as solid wood or wool. Ideally work at a proper workbench with ESD safe features, such as a metal frame. Before work, try to discharge yourself into a mains earth fitment, water pipe etc.

This is important as parts of this kit are static sensitive and even if any damage is not immediately obvious, so called "latent damage" can occur, where a device may be partially degraded yet continue to perform its intended function. However, the operating life of the device may be reduced dramatically, leading to premature failure.

If you are unsure about any part of the upgrade procedure, seek advice before proceeding.

#### Before you start:

Shut the mixer down, switch off, and remove the power leads.

## **Remove the Old Engine**

Remove the 4 x Thumbscrews on the engine.

Remove the ribbon cable and connectors paying attention to the connector locks under the connectors.



## Fit the New Engine

Place the new engine in the engine slot and re-connect the cables.

Switch the console on.

'Hardware change detected' dialog box will appear.

*	Quantum 8	***	Network Settings	~*•	Quantum Setup
**	Quantum Upgrade	•*•	Surface CPU Upgrade	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	File Brows
					×
	Hard	ware C	hange Det	ected	-
	Engine B			Engine A	io ne
	A Surfac Swi	B ce FPGA itcher	A Surface Swite	B e CPU cher	
	The devices highlighted in To ignore and	Consc orange have soor start the cor Uniock and run setup	e setup required changed. Unlock t as possible. nsole app, press "St d Cuan	he console and run si art Quantum 8* art tum 8	etup as

Click on Unlock and run Setup.

Allow the console to Restart.

Quantum Setup Utility will open. Click Setup. Configuring devices appears on the screen.

• */• output	• • Net	work	Quantu	m
Quantum 8	Sett	ings ace CPU	Setup	
Upgrade	Upg	rade		wser
	Setup Utility			ī
Engine B		E1		
A Sur S	B face FPGA witcher	A B Surface CPU Switcher		
<u>Configuring devices please</u>	wait	n		

Once done, Setup successful message will be displayed.

Quantum 8	~~	Network Settings	Quantum Setup
Quantum Upgrade	•**•	Surface CPU Upgrade	File Browser
■ ©Stefa <b>***DiGiCo</b> Q8	Setup Utility		- D X
Engine B			Engine A
	В		6 5 Engine
Su	rface FPGA Switcher	Surface Switc	- CPU her
Go to Quantum Home	Setup No iss > Advanced Sett Ins	o successfull ues detected tings > Configure Al structions.	, and follow the on-screen
	Exit	Rescar	

Next follow the on-screen prompt as highlighted.

Click exit.

Go to Quantum Home>Advanced settings> Configure All. This will configure the left, centre and right screens in the appropriate position and Orientation confirmed by the screen highlighted in blue in the respective screens.

•**•	Quantum 8	Network Settings	Quantum Setup	
			· · ·	Y
		Advanced Settings		
		Lock System Settings		
		Display Settings		
		External Screen		
	Screen	Resolution		
	Position	Orientation		
	Configure Al Auto configure and appl external display settings	1 Caibrate Touchusereens	ny aya	
		Quantum Home Update		
		Current Version: 2.0.1.1 Update To: n/a		
	Ŷ	Select File		
	Test	Windows	Settings	
<b>(</b>	Delete Startup Sessions	System Information	Power	

Configuration Successful message will be displayed.

Quantum 8				
	Left	Master	Right	
		Lock System Settings		
	Configurat Displays su WARNING	External Screen	uch screens?	
	Configure All	Yes No	a Unorsky Displayer	

Next calibrate touchscreens.

Warning- Screen will be very bright for the next few steps.

Follow the on-screen instructions to tap the screen with a finger. Press Enter.

Tap this screen with a single finger to identify it as the touchscreen.

If this is not the Tablet PC screen, press Enter to move to the next screen. To close the tool, press Esc.

Follow the same procedure for the next two screens.

Once all the screens are done, Calibration Successful message will be displayed.



Click Yes on the Configuration successful to lock and Restart.

The console will restart and boot into the Quantum Application software.

Repeat this procedure with the second Engine if necessary, as prompted by the Hardware change detection utility.